



iVIEW-2600HD

USER'S MANUAL



FULL HD 1080P UPCONVERSION DVD PLAYER WITH HDMI INTERFACE

To assure the product to work in best status

Please read the users manual carefully before operation and keep it well for future use

SAFETY WARNINGS

Follow instructions - All operating and maintenance instructions should be followed and warnings adhered to.

Standby - The standby button on the remote control does not switch off the DVD completely and the DVD will continue to draw electricity from the mains supply. Therefore in the interest of safety and to avoid unnecessary energy consumption, never leave your DVD in standby while unattended for long periods of time, eg overnight, while on holiday or white out of the house.

Cleaning - Unplug the product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Accessories Do not use accessories not recommended in this instruction book as they may be hazardous.

Accessories - Do not use accessories not recommended in this instruction book as they may be hazardous.

Water and Moisture - Hazard of electric shock. Do not use this product near water or in rainy moist situations.

Placing or Moving - Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

Power Cord protection - Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which cords exit the product.

Lightning - For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

Overloading - Do not overload wall outlets and extension cords as this can result in risk of fire or electric shock.

Objects and Liquid - Never allow objects of any kind or liquids to be pushed/spilled into contact with dangerous voltage or other hazards.

Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage points or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service - Disconnect this product from the wall outlet and all power sources including batteries, and refer servicing to qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged.
- b) If any liquid has been spilled onto, or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally even if you follow the operating normally even if you follow the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operating condition.
- e) If the product has been dropped or the cabinet has been damaged.
- f) When the product exhibits a distinct change in performance. This indicates the need for a service.

Replacement Parts - When replacement parts are required be sure the service technician has used replacement parts that are specified or that have the same characteristics as the original part. Unauthorised substitutions may result fire, electric shock and other hazards.

Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that product is in safe operating order.

Condensation - Moisture will form in the operating section of the player is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, the player performance will be impaired. To prevent this, let the player stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually. Condensation may also form during the summer if the player is exposed to the breeze from an air conditioner. In such cases, change the location of the player.

IMPORTANT WARNING

ADVD player is a Class 1 laser product, however this player uses an invisible laser beam that could cause hazardous radiation exposure.

Be sure to operate the player correctly as instructed.

The following caution label is located on the rear panel of the player.

Class 1 Laser Product

When the player is plugged into the wall outlet, do not place your eyes close to the opening of the disc tray and other openings to look into the inside of the player.

Use of controls or adjustments or performance or procedures other than those specified herein may result in hazardous radiation exposure.

Do not open covers and do not repair yourself: Refer servicing to qualified personnel

To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.

Do ensure that the mains plug is easily accessible.

Do allow minimum distance of 5cm around the apparatus for sufficient ventilation.

Don't use this apparatus in tropical climates.

Don't place naked flames such as candles and night lights on or near the unit.

Thank you for purchasing this product.
With this DVD player you can enjoy full-length movies with true cinema picture quality and multi-channel sound.

Unique features of this player include an S-Video output and selecting of sound and subtitle languages and of different camera angles (depending on the disc). What's more, parental control lets you decide which discs your children can watch.

Your player can also play audio CDs files on CD-Rs.

Please check that this package contains the following items:

DVD player
Audio Cable(red and white)
Video Cable(yellow)
Remote control with two batteries

Basic DVD features

Front Panel	page1
Back Panel	page1
Remote Control.....	page2
System Connection.....	page3
Disc features	page6

Basic Playback

Switch on/off the player	page7
Playback Features	page7
Subtitles/Main Menu	page9
Program playback.....	page10
Zooming/A-B repeat playback.....	page11
Playing a DVD	page12

Region Management Information

This unit is designed and manufactured to respond to Region Management Information recorded on DVD discs. If the region number of a disc does not correspond to the region number of this unit, it will not be able to play the disc.

Advanced Playback

Customizing the function setting	page14
HDMI function setting	page16
Setting the parental lock	page17
CD/JPEG/MPGE-4 playback.....	page18

Extra Information

Troubleshooting Guide.....	page19
Specifications	page20

 
Know these

safety symbols




BASIC DVD FEATURES

FRONT PANEL:

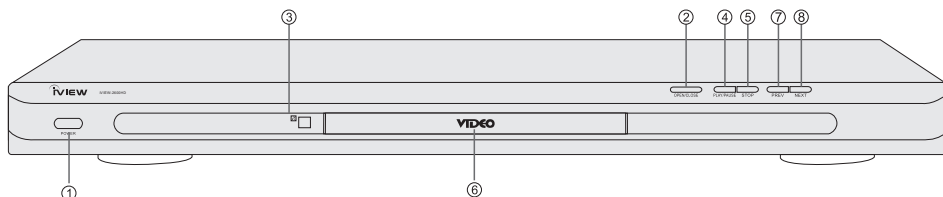

- | | |
|-----------------------|-------------------|
| 1. POWER KEY | 4. PLAY/PAUSE KEY |
| 2. OPEN/CLOSEPLAY KEY | 5. STOP KEY |
| 3. DISPLAY WINDOW | 6. DISC TRAY |
| 7. PREV KEY | 8. NEXT KEY |

 
BACK PANEL:

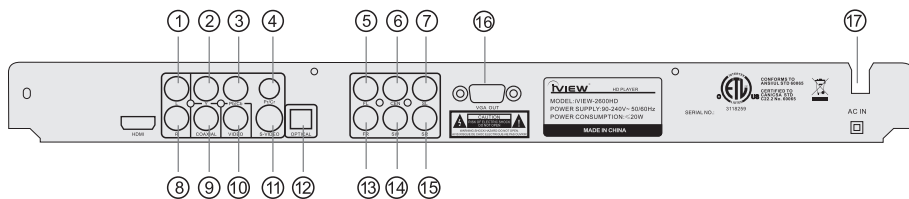

- | | |
|-------------------------|--------------------|
| 1. STEREO LEFT | 10. VIDEO |
| 2. COMPONENT OUT(Y) | 11. S-VIDEO |
| 3. COMPONENT OUT(Pb/Cb) | 12. OPTICAL |
| 4. COMPONENT OUT(Pr/Cr) | 13. FRONT RIGHT |
| 5. FRONT LEFT | 14. subwoofer |
| 6. CENTER | 15. SURROUND RIGHT |
| 7. SURROUND LEFT | 16. VGA OUT |
| 8. STEREO RIGHT | 17. POWER INLET |
| COAXIAL | |

REMOTE CONTROL:

 1. STANDBY/ON: On/Off control.
2. PROG: Sets Title/Chapter.
3. HDMI: HDMI on/off or switch the video output resolution up to 720P/1080i, etc..
4. SUBTITLE: Subtitle on/off and select subtitle language.
5. N/P: Get NTSC, PAL, AUTO
6. USB: Switch to USB mode.
7. A-B: First time pressing **A-B** key to set initial point.
Second time press **A-B** key to set end point.
After setting, the program repeats playing from A to B. Third time press **A-B** key to cancel repeat.
8. REPEAT: Repeats tracks, titles, chapters or while disc.
9. SETUP: Entry into setup mode.
10. LEFT/UP
11. MENU: Display menu.
12. #: Turn up key.
13. 4: Reset key to 0.
14. MUTE: Mute On/Off.
15. VOCAL: Select L/R/MIX/SETRO when activating Karaoke mode.
16. REV/FWD: Fast reverse/Fast forward.
17. SHUFFLE: Random On/Off.
18. STOP: Stop playing.
19. OPEN/CLOSE: Disc tray operation.
20. CLEAR: To clear the input number while program.
21. ANGLE: Select viewing angle.
22. LANGUAGE: Press it repeatedly during DVD playback to choose the audio language you prefer according to the DVD information.
23. RETURN: Return to menu.
24. V-MODE: Change VIDEO output.
25. DISPLAY: Display the single elapsed time, remain time, total elapsed time, total remain and other information of the disc.
26. ZOOM: Enlarges and reduces picture size.
27. PBC: Playing back control.
28. ENTER
29. RIGHT/DOWN
30. TITLE: Display disc title.
31. VOL+: Turn volume up.
32. b: Turn down key.
33. VOL-: Turn volume down.
34. EQ: Display the equalizer.
35. 0-9 number keys
36. GOTO
37. SLOW: Slow playing.
38. PREV/NEXT: Previous chapter/ Next chapter
39. PLAY/PAUSE: Play and Pause playing.
40. STEP: Step playing.

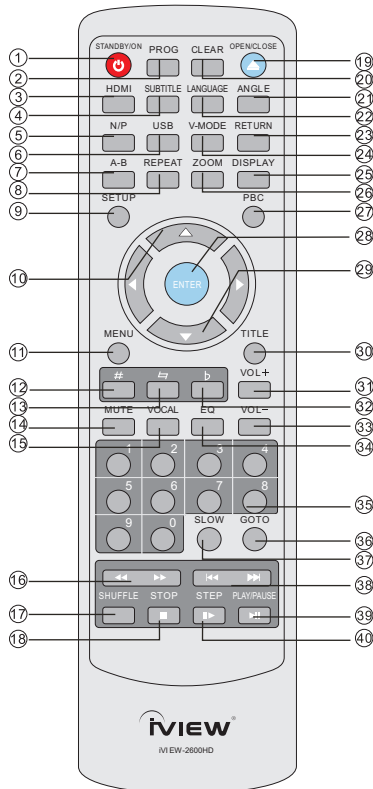

Use of the remote control

- Remove the battery compartment cover. Insert two "AAA" batteries, (observing the correct polarity). Replace the battery cover.
- Do not mistreat the remote control. Avoid high temperatures and dropping.
- If the handset is not to be used for a long period, remove the batteries, as they may leak and cause internal damage.
- If the batteries are worn out, replace both, do not mix different types of battery.

BASIC DVD FEATURES

SYSTEM CONNECTION

1. When making connection between this unit and other components, be sure all connection are power-off.

2. Audio/Video cables are connected according to the different colour identification and they should be fitted firmly.

Yellow to video terminal
White to audio terminal(L)
Red to audio terminal(R)

 
3. Scheme of connection

HDMI CONNECTION

1 If your TV has an HDMI input, you can use the HDMI cable to connect the DVD player to the TV. This is the most preferred connection method since it delivers both video and audio in pure digital format via a single cable (*cable not supplied*).

2 The HDMI video signals are compatible with the DVI(Digital Visual Interface) format, HDMI jack can be connected to DVI jacks by way of an HDMI-DVI converter. The HDMI specification supports HDCP(High-bandwidth Digital Contents Protection), a copy protection technology that incorporates coding technology for digital video signal.


3 User an HDMI-DVI converter cord(not supplied). The DVI jack will not accept any audio signals, so you have to use another audio connection in addition to this connection. Furthermore, you can not connect the HDMI OUT jack to DVI jacks that are not HDCP compliant (e.g., DVI jacks on PC displays)

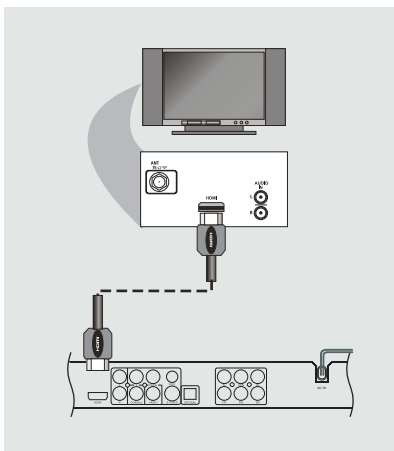

COMPOSITE VIDEO/S-VIDEO CONNECTION

1 Use the composite video cable(yellow) or S-Video cable(black) to connect the DVD player's CVBS(VIDEO) or S-Video jack to the video or S-Video input jack on the TV.

 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD player to the corresponding AUDIO IN jacks on the TV.

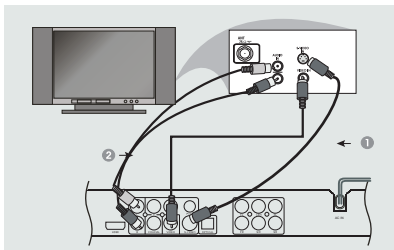


COMPONENT (Y PB PR) CONNECTION

IMPORTANT!


The progressive scan video quality is only possible when using Y Pb Pr and a progressive scan TV is required.

 - 1** Use the component video cables (red/blue/green) to connect the DVD system's Y Pb Pr jacks to the Corresponding Component video input jacks (or labeled as Y Pb Pr) on the TV (cable not supplied).
- 2** To hear sound of this DVD player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD player to the corresponding AUDIO IN jacks on the TV.

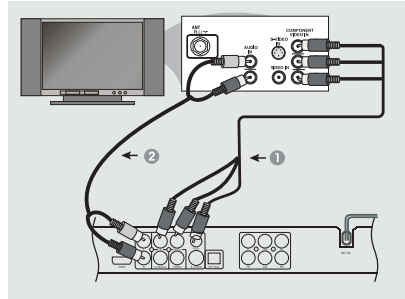


5.1CH AUDIO OUTPUT CONNECTION

 - 1** Use the 5.1CH audio cables (red/yellow/white) to connect the DVD player's 5.1CH audio jacks to a Receiver/Amplifier with 5.1CH audio input (cable not supplied).
- 2** Please set the audio down-mix mode of the DVD player to "5.1CH", and you can set the speaker size and distance in the "Speaker Setup" page of the DVD player's setup menu.

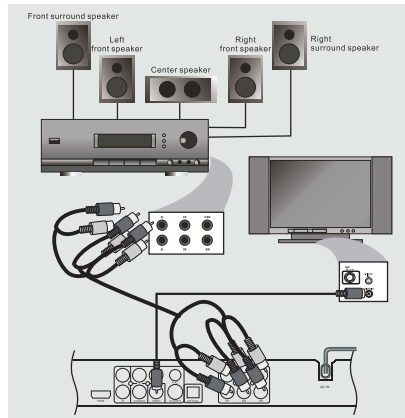

COAXIAL AND OPTICAL CONNECTION

 
- 1** Use the coaxial cable(black) or optical cable(black) to connect the DVD player's coaxial or optical jack to the coaxial or optical input jack on the TV.
- 2** To watch the picture of this DVD Player through your TV, use the video cables (yellow) to connect video jacks of the DVD player to the video in jacks on the TV.

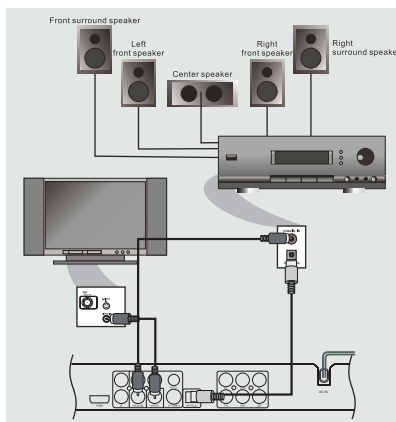


CONNECTING THE POWER CORD

After everything is connected properly, plug in the AC power cord to the power outlet.

 Never make or change any connections with the power switched on.

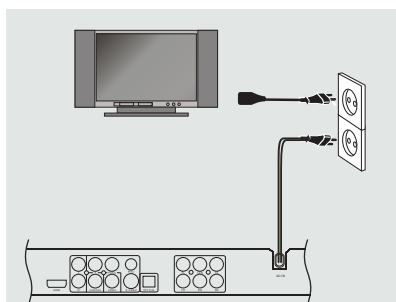

DISC FEATURES

 **Title**

When two or more movies are recorded on a DVD disc, the disc is divided into two or more sections. Each section is called a "TITLE".

Chapter

The titles can be subdivided into many sections. Each section is called a "Chapter".

Track

An audio CD can contain several items. These are assigned to the tracks.

Removing a disc from its case

Be sure to hold the edge of the disc. Do not touch the surface of the disc.
 Pick up the disc gently from the case.
 Do not scratch the disc.
 Do not get dirt on the surface of the disc.
 Do not stick a label or adhesive tape on the disc.
 Do not drop or bend the disc.

Storing a disc

Store a disc in its case to avoid the risk of scratches, dirt or damage.
 Do not leave a disc exposed to direct sunlight or in hot or humid places.

Cleaning disc

Wipe the disc with a clean, dry cloth from the centre to the edge.
 Do not wipe the disc round.
 Do not use liquid or aerosol cleaners.

BASIC PLAYBACK

SWITCH ON/OFF THE PLAYER

Start-up

- 1** Plug the mains plug to the mains socket.
- 2** Press in the **POWER ON/OFF** switch to switch on the Back of the player.

Stand-by

You may switch the unit to standby status by pressing the **STANDBY/ON** button on the remote control or on the front panel.

To switch on the unit again, press the **STANDBY/ON** button again.

Switching Off The Player

To completely power off the unit, press up the **POWER ON/OFF** switch to OFF position.

PLAYBACK FEATURES

1 *Fast forward playback*

Press **▶▶** during normal playback
Each press will increase the speed by the following factor:
2X, 4X, 8X, 16X or 32X.

Press **PLAY/PAUSE** to resume normal playback.



2 *Fast reverse playback*

Press **◀◀** during normal playback
Each press will increase the speed by the following factor:
2X, 4X, 8X, 16X or 32X.

Press **PLAY/PAUSE** to resume normal playback.



3 *Step playback*

Press **STEP** during normal playback to pause playback.
Press the button again to step playback. One frame is advanced each time you press the button.

 
Press **PLAY/PAUSE** to resume normal playback.



4 *NEXT playback*

Press **▶▶** during normal playback to skip forward the title after current one.

Press **PLAY/PAUSE** to resume normal playback.

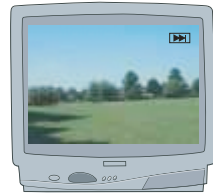

5 *PREV playback*

Press **◀◀** during normal playback to skip backward the title before current one.

 
Press **PLAY/PAUSE** to resume normal playback.




6 *SLOW playback*

Press **SLOW** button during normal playback.

While playing VCD, each press SLOW button switches the playback speed in the following sequence:



 While playing DVD, each press SLOW button switches the playback speed in the following sequence:



Press **PLAY/PAUSE** to resume normal playback.



SUBTITLES

If the disc you are playing does not have subtitle options, you will not be able to access the subtitle menu.

Changing subtitle language is cancelled when you open the disc tray or turn the power off.

You may not be able to turn the subtitle off or on even if they are recorded on it.

1 *Select Subtitle*

 
Press **SUBTITLE** during normal playback.

The subtitle display will appear on screen.



2 *Change Subtitle language*

Press **SUBTITLE** continuously during playback to switch between all of the available subtitle languages that are on the disc. The subtitle display will appear on the screen. Press **SUBTITLE** until **SUBTITLE OFF** appears onscreen to turn off subtitles.

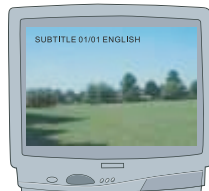

Accessing the Main Menu

Some DVDs allow you to select the main menu during playback. This allows you to change settings while the DVD is paused.

Accessing the Main Menu

Press the **MENU** button during playback. The DVD's main menu will appear. Press **▲ ▼ ◀ ▶** or **▶** to navigate around the main menu of your disc and change any settings. Select the category you want and press the **PLAY/PAUSE** button to start.

 


PROGRAM PLAYBACK

You can arrange the playback order of titles and chapters on a disc by using the program feature.

1 *Select program*


Insert a disc into your player, then press the **PROG** button to view the program on screen display.

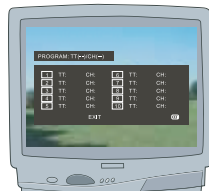

2 *Choose a title(chapter)*

Using the number buttons, fill in the title(TT) and chapter(CH) numbers. The highlight moves automatically, but you can move it with the **▲ ▼ ◀ ▶** buttons as well.

 
NOTE: For numbers higher than 9, for example 14, Press the 1 button followed by the 4 button.

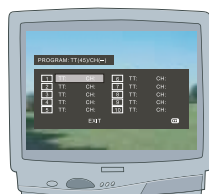

3 *Playback selected titles*

Press **▲ ▼ ◀ ▶** to select **START** and then press **PLAY/PAUSE** button to play your selection. To cancel program play, Press the **STOP** button twice.

 
NOTE: To delete the program selection you must turn off your DVD player or eject the disc.

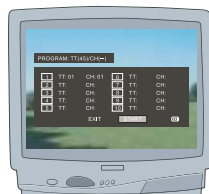

ZOOMING

1 *Select zoom*

 Press **ZOOM** during normal playback, the unit magnifies in the center of the picture in 2X, 3X, 4X, 1/2, 1/3, 1/4 with each press.

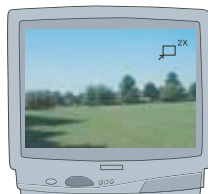

2 *Moving the zoom point*

When you are in zoom mode, press the **▲ ▼ ◀ ▶** or **▶** to move the focus of the zoom around the screen.

 


A-B repeat playback

A-B repeat playback allows you to repeat material between two selected points.


1 *Locate playback start point*

Press the **A-B** button during playback. The start point(A) is selected.

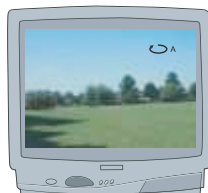

2 *Locate playback end point*

 Press the **A-B** button again to select the end point(B). The DVD video player will automatically return to point(A) and start to repeat playback of the selected segment(A-B).

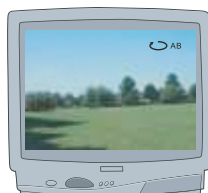

3 *Resume normal playback*

To resume normal playback press the **A-B** button again, the A-B on-screen display will disappear and your disc will continue to play normally.



PLAYING A DVD

Repeat play

To repeat a title, chapter or track that is currently being played

1 *Choose Repeat Function*

Press **REPEAT** button once to repeat a chapter, twice to repeat a title, thrice to repeat the whole disc and once more to turn repeat off.



Select Title**2** *Choose Title Function*

Press **TITLE** button to make the playback go back to the menu of the disc.

Note: some DVD discs have not the Title Menu recorded, pressing this button will restart the disc.



Using the on-screen display

Use the on-screen display to view the time, title or chapter information of the playing disc.

3 *View Display*

Press **DISPLAY** button to view the on-screen display for example: title number, chapter number, the elapsed time, the remain time etc.



Changing languages**4** *Choose languages*

Press **LANGUAGE** button during playback. Keep pressing the key to select the language of your choice.

NOTE:
Availability to languages varies with discs.



GOTO

5 *Choose Search Function*

Play from a specified location.

For example: During the normal playback, press **GOTO** button, you can search the Title and Chapter on the TV screen.



Selecting the camera angle

Note that angle function will not work on DVDs that do not have recorded multiple angles.

6 *Changing the camera angle*

Press **ANGLE** button when the angle icon will display on the screen. Each time you press **ANGLE**, the angle will change.

For example: 1/3, 2/3, 3/3.



CUSTOMIZING THE FUNCTION SETTINGS

1 ENTER SETUP

During normal playback press **STOP**, then press **SETUP**.

Note: Press **▼** to go from main selection to sub-section. Press **▼ / ▲** then press **ENTER** to select.

General	Audio	Sound	Video	Preference
General Setup Page ..				
TV Display			4:3PS	
Angle Mark			On	
OSD Lang			ENG	
Captions			Off	
Screen Saver			On	
HDCD			1X	
Last Memory			On	
Go To General Setup Page				

2 Select GENERAL SETUP

Press **◀** and **▶** to highlight the category GENERAL SETUP, then press **ENTER** to select.
There are 7 items for your selecting: TV DISPLAY, ANGLE MARK, OSD LANGUAGE, CLOSE CAPTIONS, SCREEN SAVER, HDCD and LAST MEMORY in this station.

General	Audio	Sound	Video	Preference
General Setup Page ..				
TV Display			4:3PS	4:3PS
Angle Mark			On	4:3LB
OSD Lang			ENG	16:9
Captions			Off	
Screen Saver			On	
HDCD			1X	
Last Memory			On	
Set TV Display Mode				

3 Select AUDIO SETUP

Press **◀** and **▶** to highlight the category AUDIO SETUP, then press **ENTER** to select.
There are 4 items for your selecting: SPEAKER SETUP, SPDIF SETUP, CH EQ SETUP 3D PROCESSING .

General	Audio	Sound	Video	Preference
Audio Setup Page ..				
Speaker Setup				
Spdif Setup				
CH EQ Setup				
3D Process				
Go To Speaker Setup Page				

4 Select SOUND SETUP


Press **◀** and **▶** to highlight the category DOLBY SETUP, then press **ENTER** to select.
There are 2 items for your selecting: DUAL MONO, DYNAMIC.

General	Audio	Sound	Video	Preference
Digital Sound Setup ..				
Dual Mono				
Dynamic				
Go To Dolby Digital Setup				

5 Select VIDEO SETUP

Press ◀ and ▶ to highlight the category VIDEO SETUP, then press **ENTER** to select. There are 4 items for your selecting:

 COMPONENT, RESOLUTION, QUALITY
HDMI SETUP

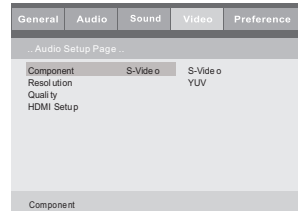


6 PREFERENCE SETUP

The Preference Page can only be accessed when playback is completely stopped, or when there is no disc in the DVD player.

Press ◀ and ▶ to highlight the category PREFERENCE SETUP, then press **ENTER** to select.

 
There are 8 items for your selecting:
TV TYPE, PBC, AUDIO, SUBTITLE, DISE MENU
PARENTAL, PASSWORD, DEFAULT

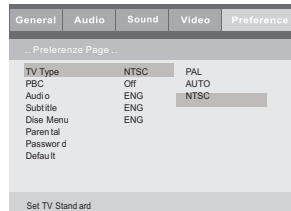

7 PASSWORD SETUP

Press ◀ and ▶ to highlight the category PASSWORD SETUP, then press **ENTER** to select.

 There are 2 items for your selecting:
PASSWORD MODE and PASS WORD.

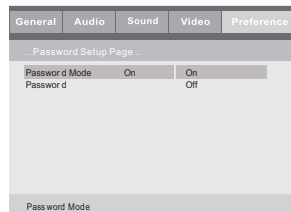


HDMI FUNCTION SETTINGS

1 HDMI SETUP

HDMI(High definition Multimedia Interface) reduces picture noise by allowing a pure digital video/audio signal path from the player to your TV.

Press ◀ and ▶ to highlight the category VIDEO SETUP, then press ENTER. Press ▼ to selection HDMI SETUP, press ENTER to confirm.

 There are 2 items for your selecting: HDMI and RESOLUTION.

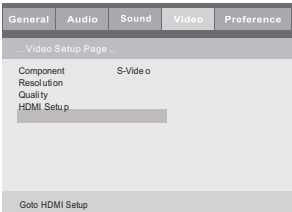

2 HDMI

 
To set digital audio output via HDMI. Default is PCM.



3 HDMI RESOLUTION

While the HDMI set ON, you can choose the HDMI resolution as follows:

PAL output:
576i, 576P, 576P, 720P(50Hz),
1080i(50Hz), 1080P(50Hz)
NTSC output:
480i, 480P, 480P, 720P(60Hz),
1080i(60Hz), 1080P(60Hz)

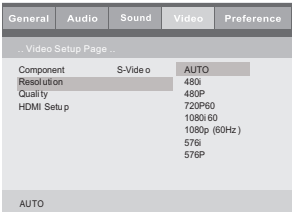

CAUTION

 
- 1. CVBS and S-VIDEO have no output under HD MODE (720P,1080i) output. TV screen will show "High Definition mode".But you can press "N/P HD" key on the remote controller to get the CVBS and S-video picture output.
- 2. During HD MODE (Through YUV) output, the HDMI (Through HDMI) output has to be off.
- 3. Under HDMI "ON" mode, the SPDIF SETUP should be set to SPDIF/PCM instead of SPDIF/RAW.
- 4. Under HDMI "ON" mode, the TV type should be set to NTSC or PAL mode.

SETTING THE PARENTAL LOCK

1 PARENTAL SETUP

To set parental control ratings in order to prevent minors from watching inappropriate contents. This function requires that the disc being properly rated and encoded.

- Press the **▶** to bring up the rating selection menu.
- Press the **▲▼** to select the rating to allow. The selected rating and below will be allowed, and any rating above the selected will be blocked.
- Press the **ENTER** button to confirm the selection. You will be asked for the parental control password. Enter the password (default password: 0000) and press the **ENTER** button.

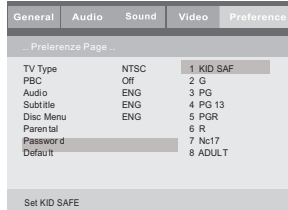


2 PASSWORD SETUP

Press **◀** and **▶** to highlight the category PASSWORD SETUP, then press **ENTER**. Press **▲▼** to selection, then press **ENTER** to confirm.


2.1 PASSWORD MODE

 Only the PASSWORD MODE is ON, you can set the parental control. The default is ON.

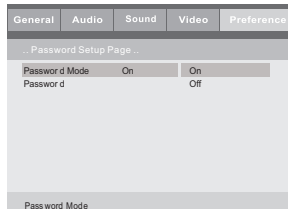

2.2 PASSWORD CHANGE

 To change the password, enter the old password (default: 0000) and then enter a 4-digit number as the new password. Enter the new password again to confirm, and then press the **ENTER** button to confirm

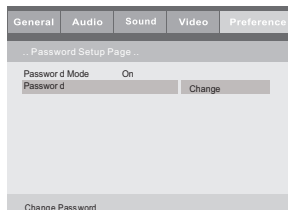

CD/JPEG/MPEG-4 PLAYBACK

You can use your DVD player to view photographs or enjoy songs stored on a CD-R. The photographs on the disc need to be saved in the JPEG file format.

JPEG files are image files. Make sure that they have a resolution of less than 5 megapixels.

Your player is an Official AVI Certified product that plays AVI video content, in compliance with AVI Certified technical requirements.

1. Press OPEN/CLOSE

Place the CD on the disc tray, and press it again to close the tray.

2. Select a folder or a picture/song contained on the CD

After the CD is loaded, a menu will appear on the screen.

Press UP or DOWN to select a folder, and press **ENTER** to view folder contents (shown in right column).

3. Select one play mode

Press UP or DOWN to choose the picture or the song you want to enjoy.

 
4. Start playback

Press **PLAY** button to enjoy the pictures or songs.

5. Rotate and image

During the slide show, you can use arrow keys to rotate an image:

Press **LEFT** to rotate an image to the left.
Press **RIGHT** to rotate an image to the right.

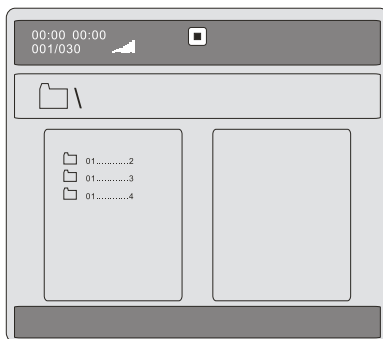

Creating your own Picture CDs

Using your computer save pictures as JPEG format and burn them on a CD-G disc, then you can watch on you TV



TROUBLE SHOOTING GUIDE

Problem	Solution
No power	Connect the plug into the wall outlet securely
No picture	Verify the connection from the DVD Player output to the TV video input. Then switch the TV to the appropriate mode. Connect the video cables into the jacks securely. Refer to your audio amplifier owners manual.
No sound	Connect the audio cables into the jacks securely. Verify the connection from the DVD audio output to the TV or receiver audio input. Then switch to the appropriate source on the receiver. Refer to your audio amplifier owners manual.
The playback picture has occasional distortion	A small amount of picture distortion may appear because of a poor quality video/sound transfer to disc. This is especially true of some discs manufactured between 1997-1998. Scratched disc.
Brightness is unstable or noises are produced during playback	Connect the DVD player directly thought the TV and not through any other source. What you are viewing is the effect of the copy protection circuitry required on all DVD players. If you don not have a video input on your TV, you must purchase an RF adaptor from your dealer.
The DVD player does not start playback	Place the disc with the graphics side up. Place the disc on the disc tray correctly inside the guide. Make sure the disc is free from scratches and fingerprints. Press the SET button to turn to turn off the menu screen. Turn the power off then disconnect the power plug and re-insert it back into the wall. Retry again. Use region 2 discs only.
The remote control does not work properly	Replace the batteries with the new ones.

SPECIFICATIONS

UPCONVERT HIGH RESOLUTION

High resolution HDMI Interface 480i / 480p / 576i / 576p / 720p / 1080i / 1080p

Upconvert to 1080P for high resolution image

Connects to LCDTV and enjoy great quality picture and movies

HDMI interface offers 5.1CH digital sound

DVD/AVI

Supports AVI Formats

DVD format compatibility: DVD / VCD / CD / CD+G / JPEG

USB INTERFACE

Plays music and movie by connecting MP3 player

CONNECTORS

HDMI Output

5.1CH RCA audio

S/PDIF coaxial digital audio

S/PDIF optical digital audio

Composite video, S-Video

Component video (Y, Cb, Cr)

POWER SUPPLY

Multi-Voltage : AC 90-240V

Power Consumption: 20W

Mass: 2.2kg